


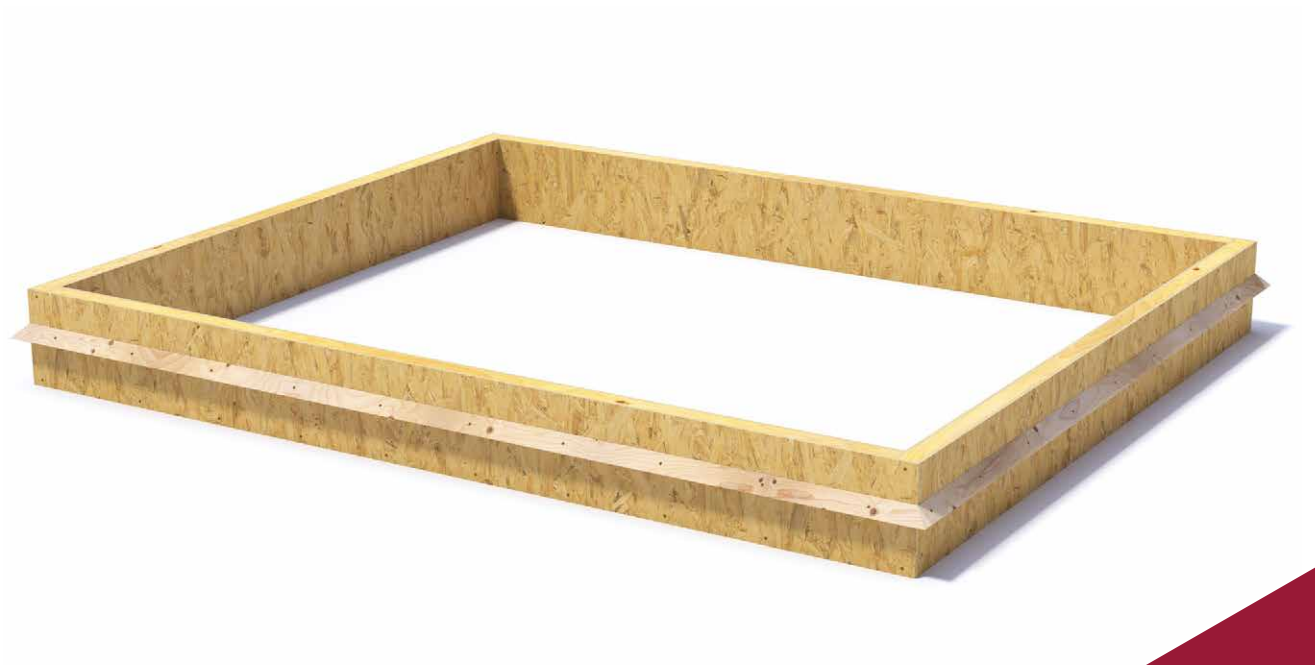

Korniche Upstand


Installation Guide



TOOLS / PARTS REQUIRED



Cordless
Screwdriver

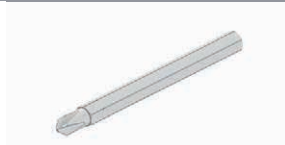

Crosshead Driver Bit



5mm x 100mm Screw
(provided)



3.5mm x 45mm Screw
(provided)



Spacer

PACKAGING CONTENTS



5mm x 100mm Screw
(provided)

USE ON FIXING POINTS
MARKED IN RED



3.5mm x 45mm Screw
(provided)

USE ON FIXING POINTS
MARKED IN BLACK



Spacer X 1



Base Sections x 4



Uprand Widths x 2



Uprand Lengths x 2



(Optional)
Short Chamfered
Batten x 2




(Optional)
Long Chamfered
Batten x 2





FIT BOTTOM BASE RAILS


1

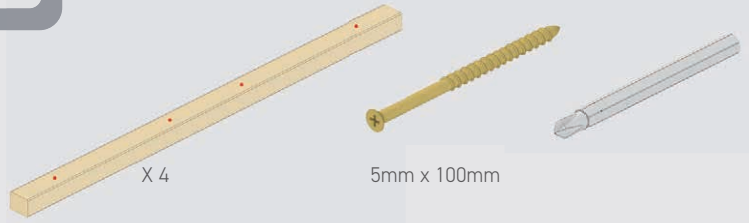


Position bottom rail battens around structural opening

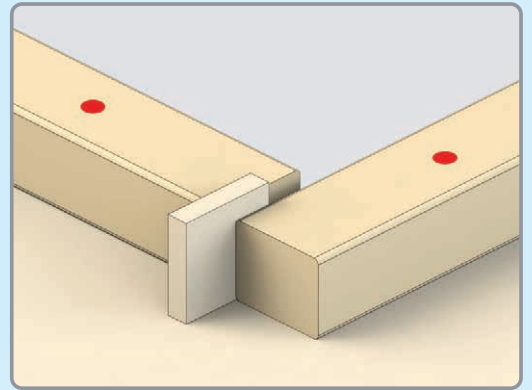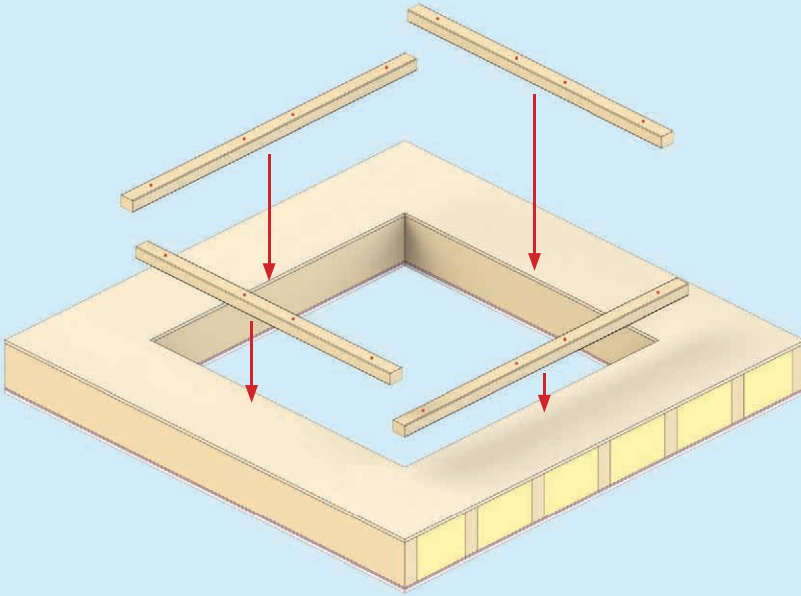

Use Spacer to set to correct gaps

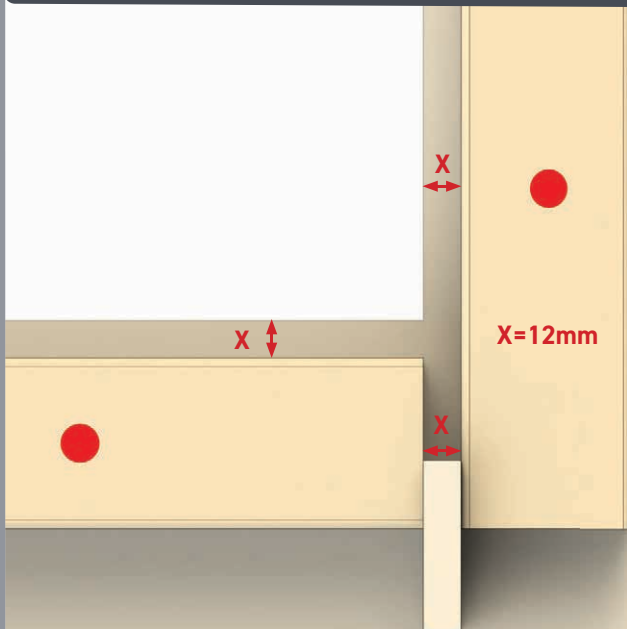

Check diagonals

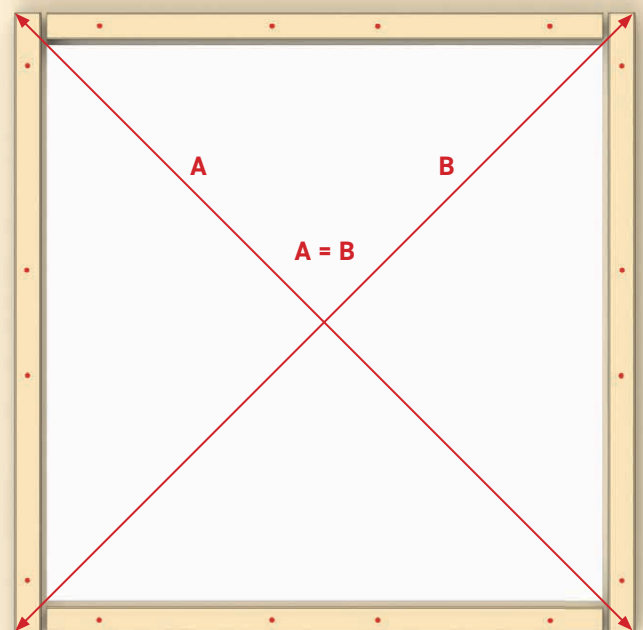




5mm x 100mm Screw
(provided)



**USE ON FIXING POINTS
MARKED IN RED**




centre

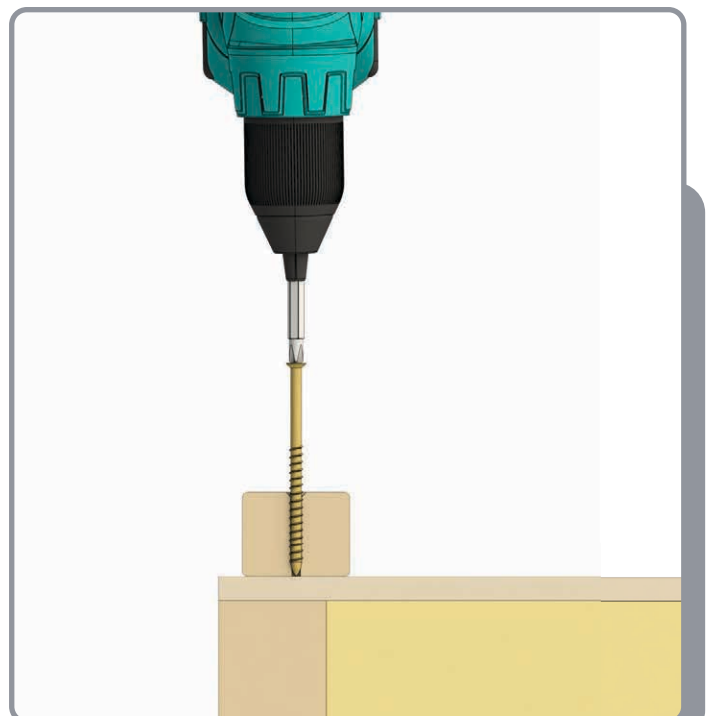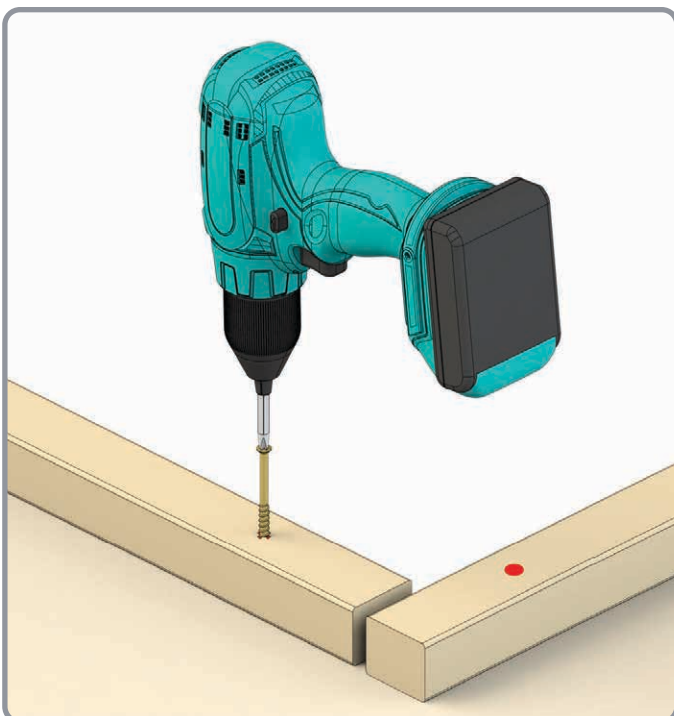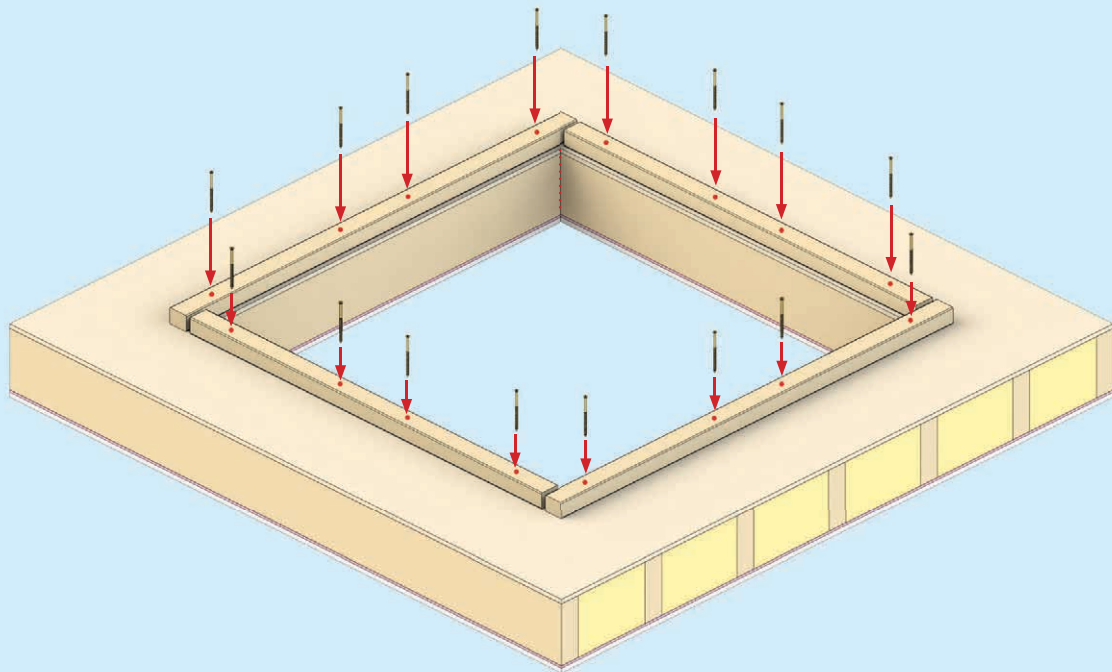


FIT UPSTAND WIDTHS



2

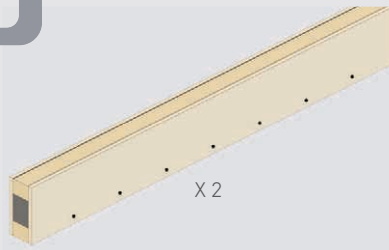


X 2



3.5mm x 45mm

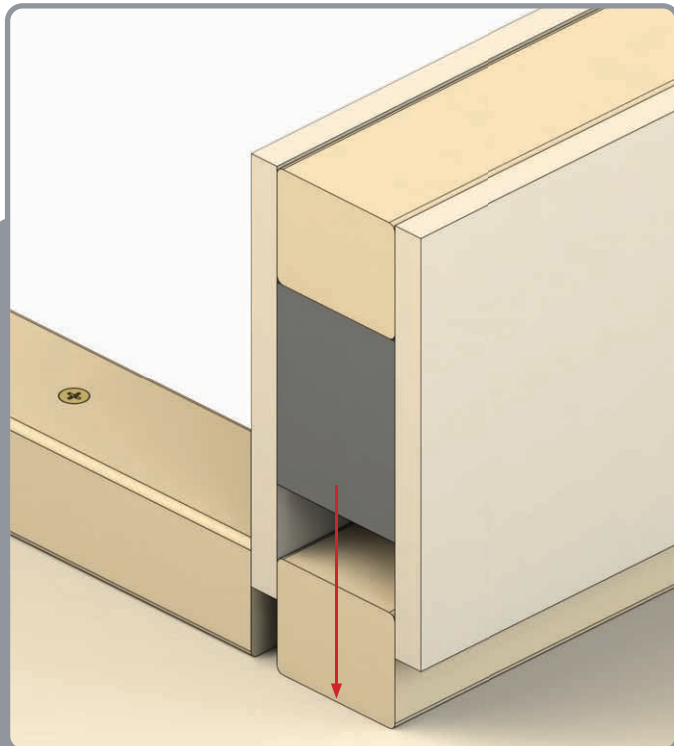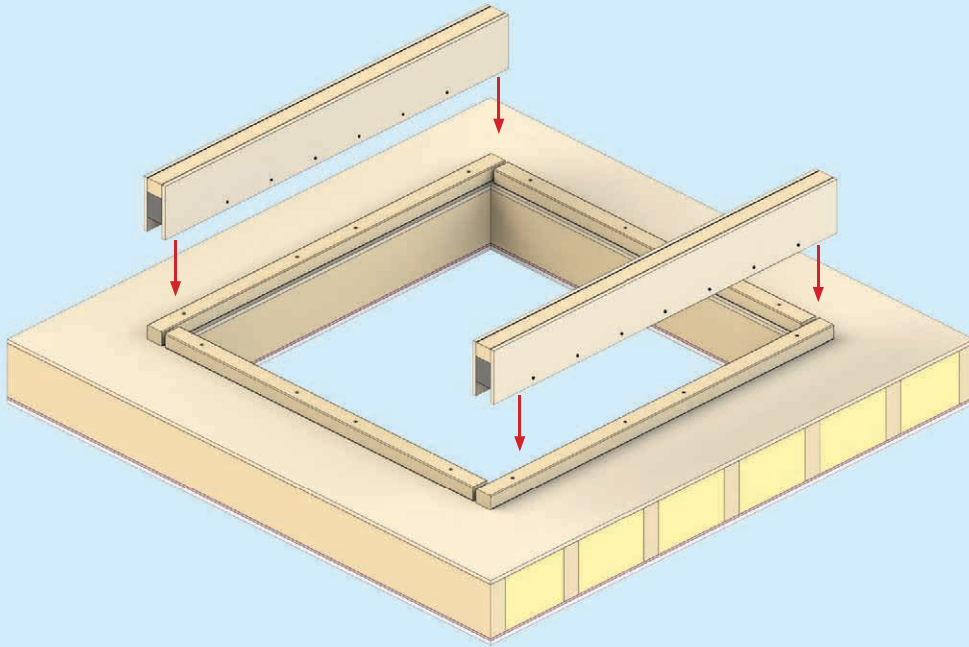




Ensure faces sit flush

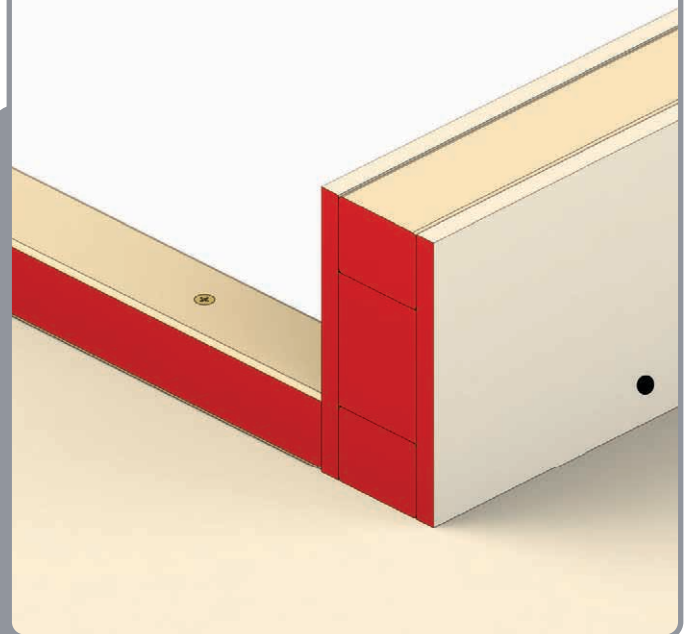






3.5mm x 45mm Screw
(provided)

**USE ON FIXING POINTS
MARKED IN BLACK**

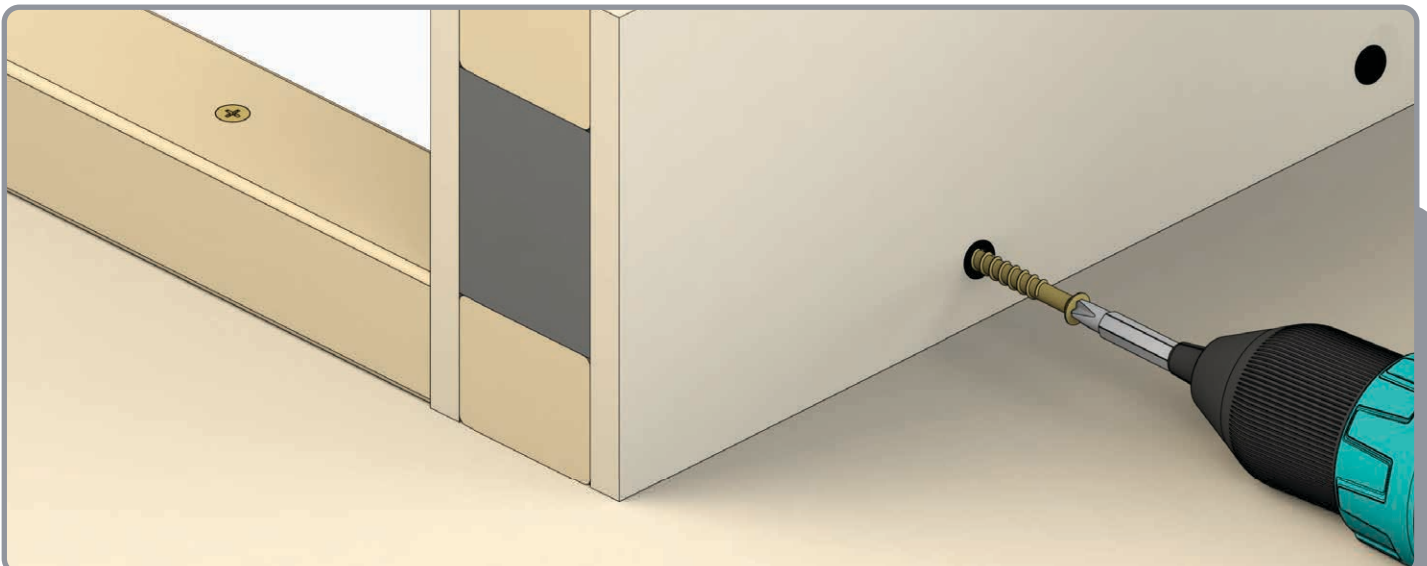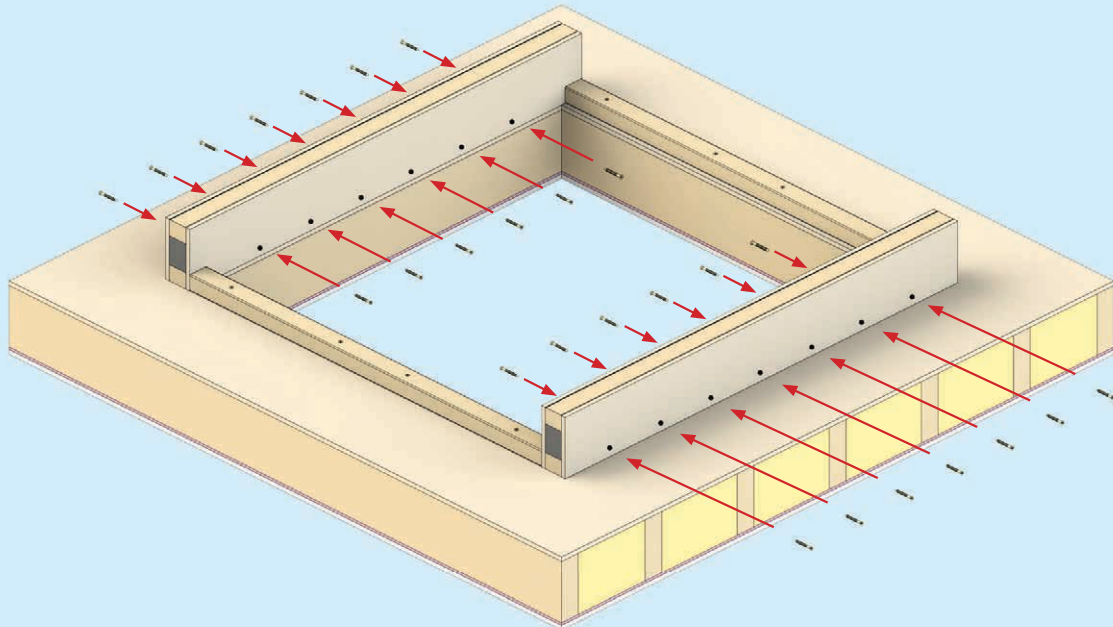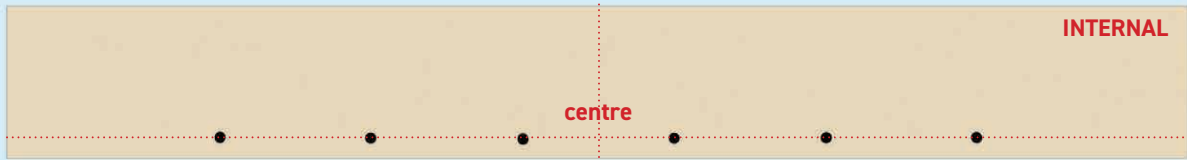


FIT UPSTAND LENGTHS

3

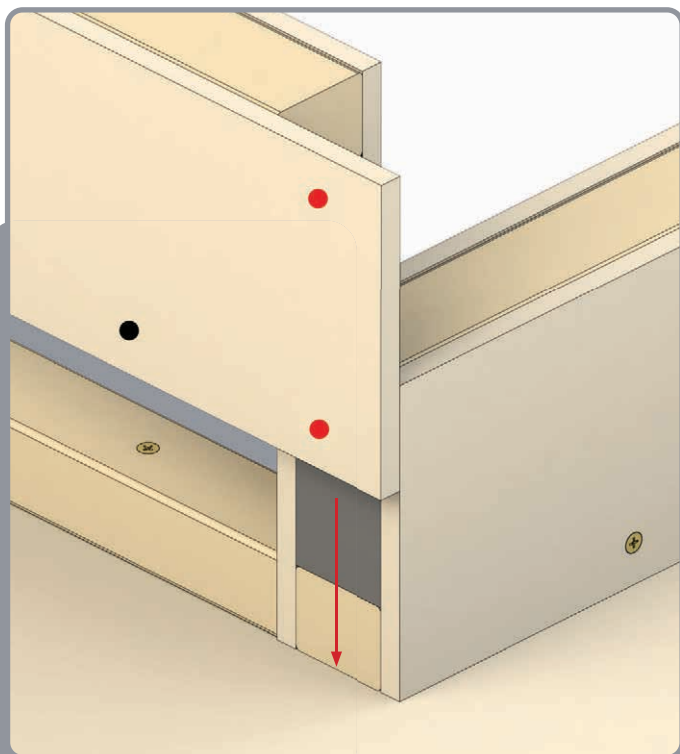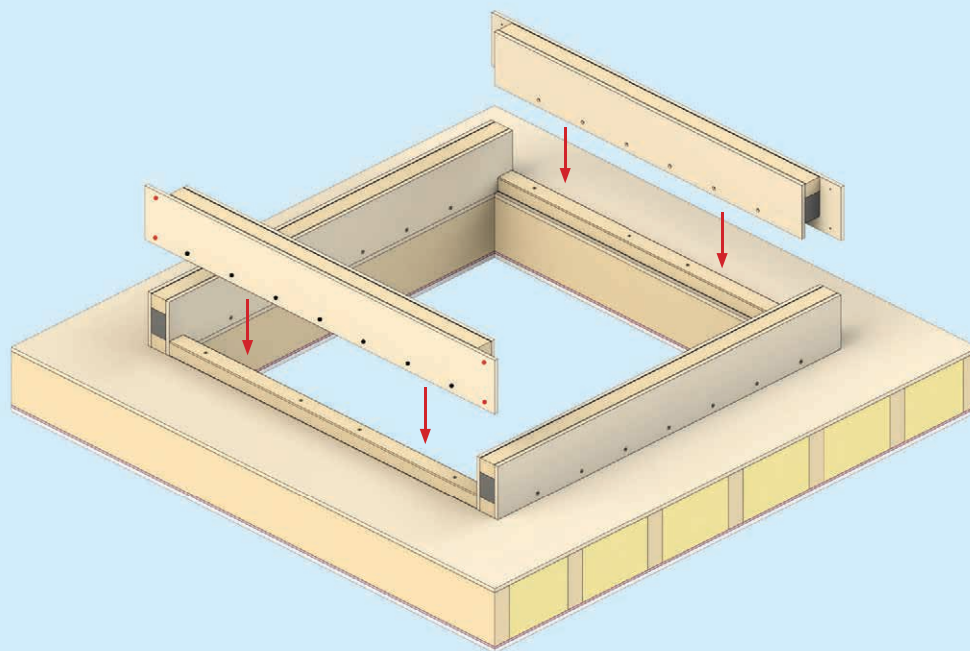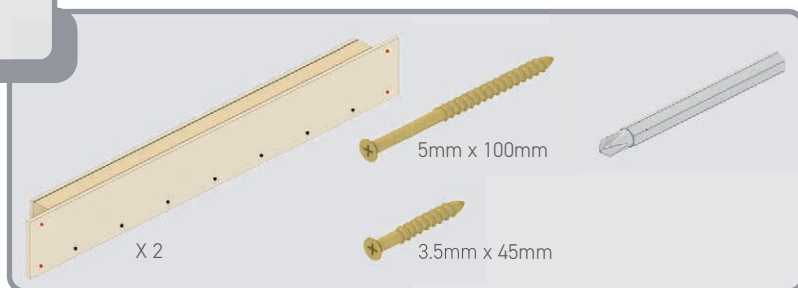




Ensure faces sit flush

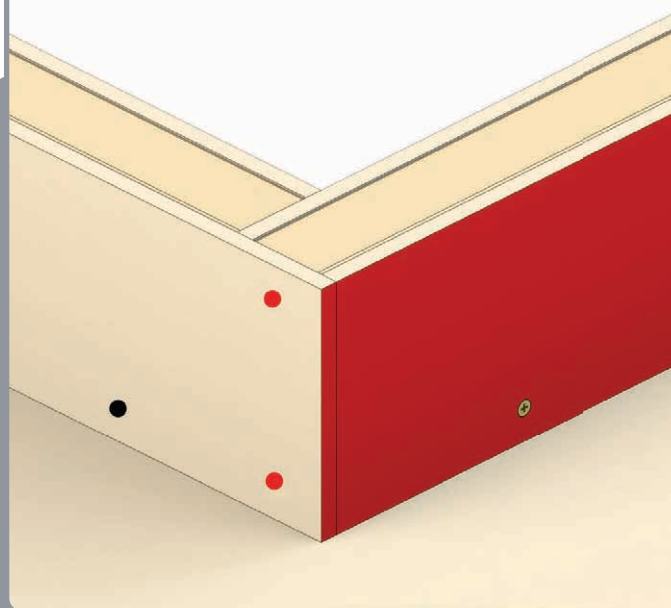



3.5mm x 45mm Screw
(provided)




**USE ON FIXING POINTS
MARKED IN BLACK**

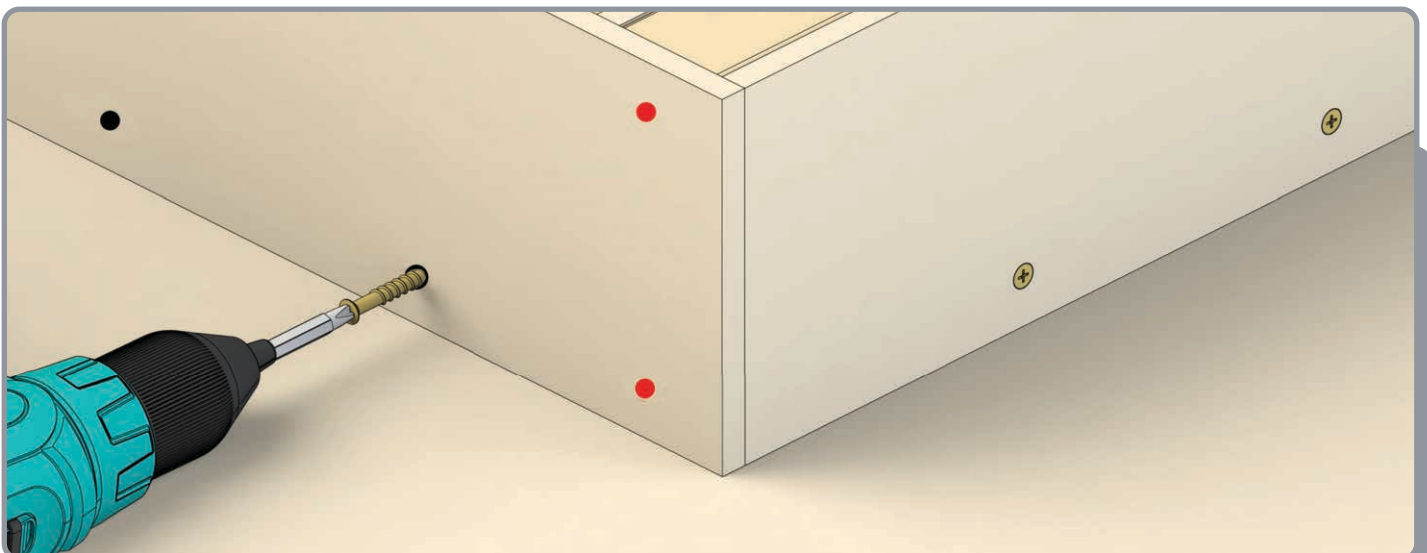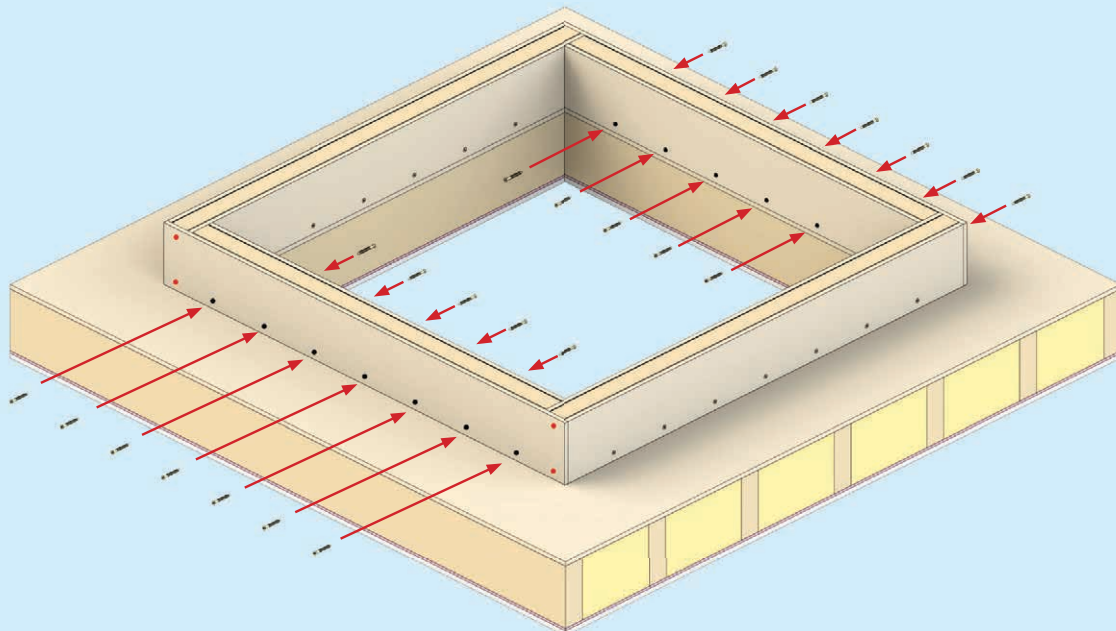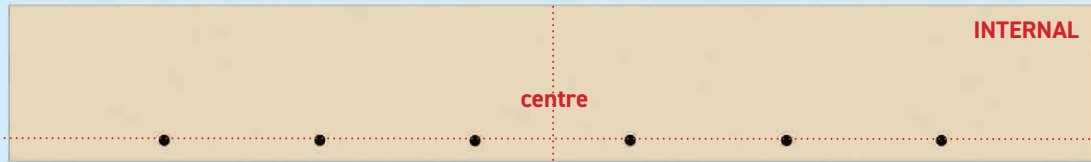




5mm x 100mm Screw
(provided)

**USE ON FIXING POINTS
MARKED IN RED**

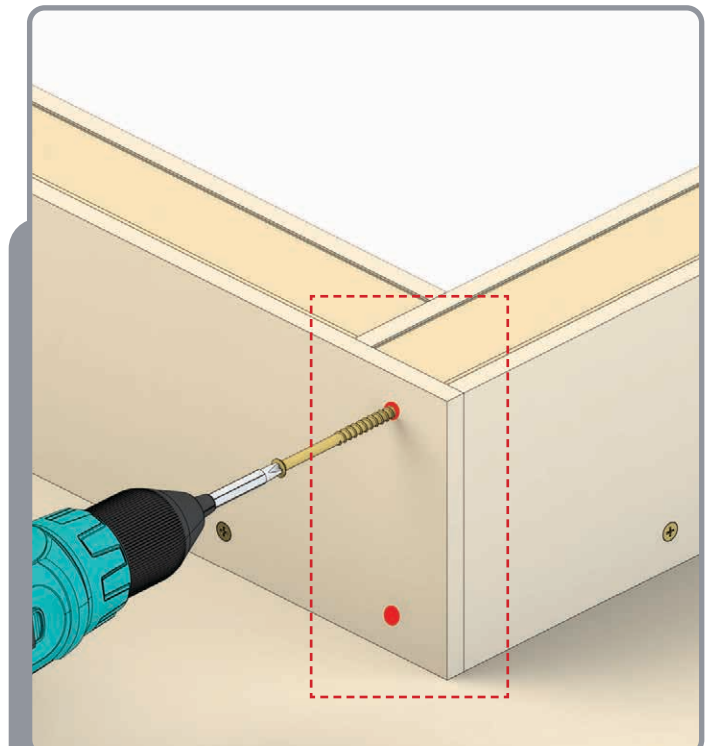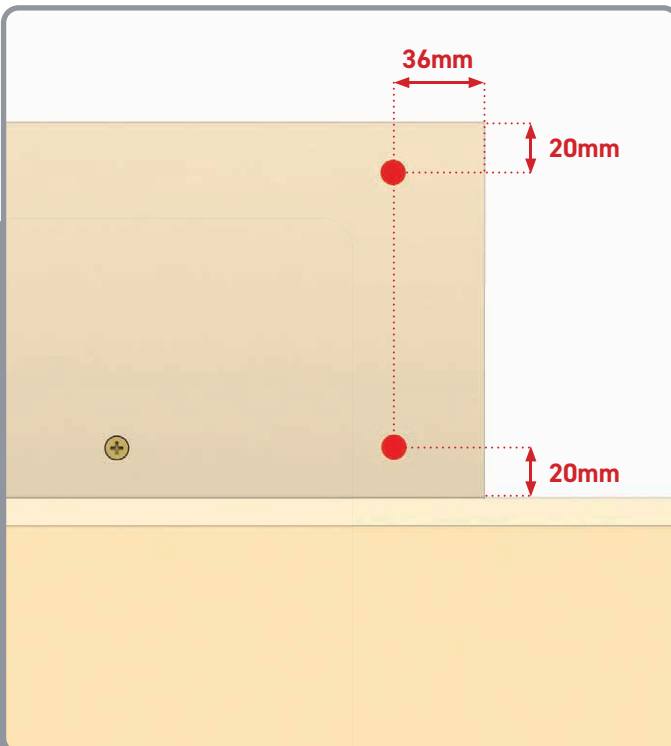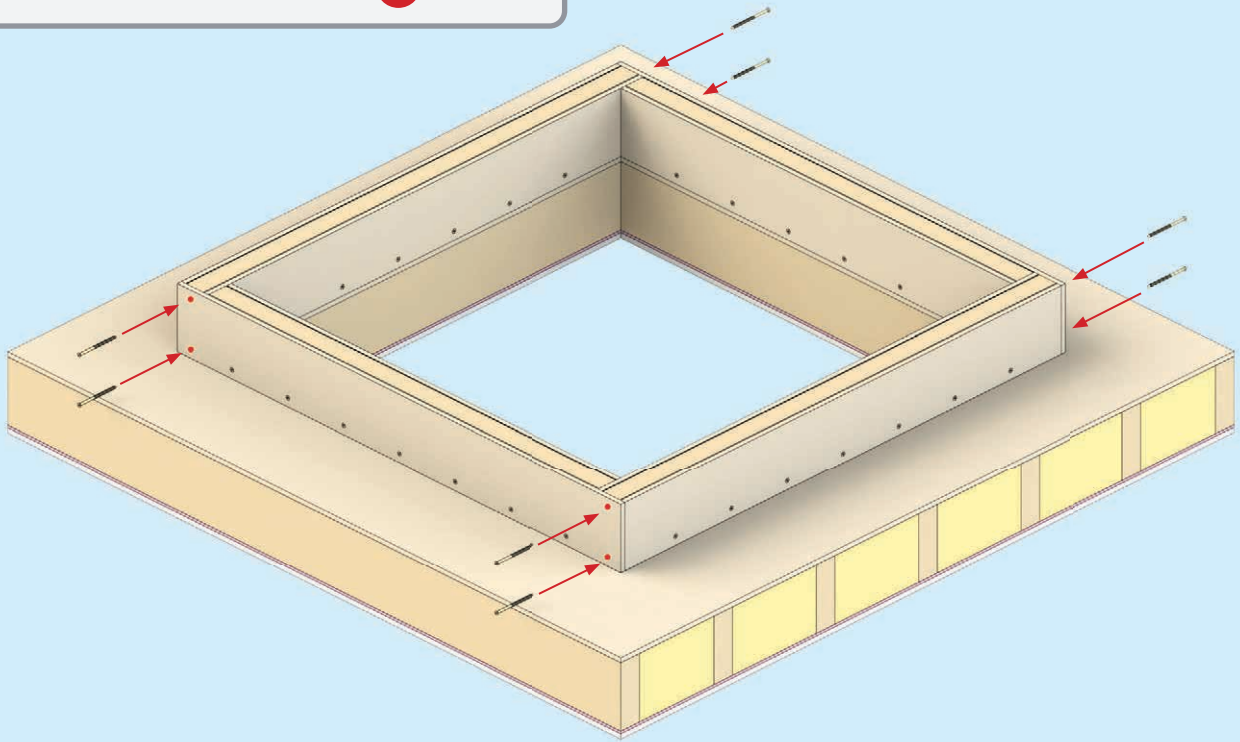


OPTIONAL - FIT CHAMFERED BATTENS

4

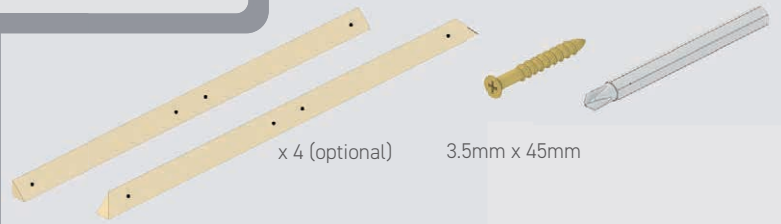


Position chamfered battens



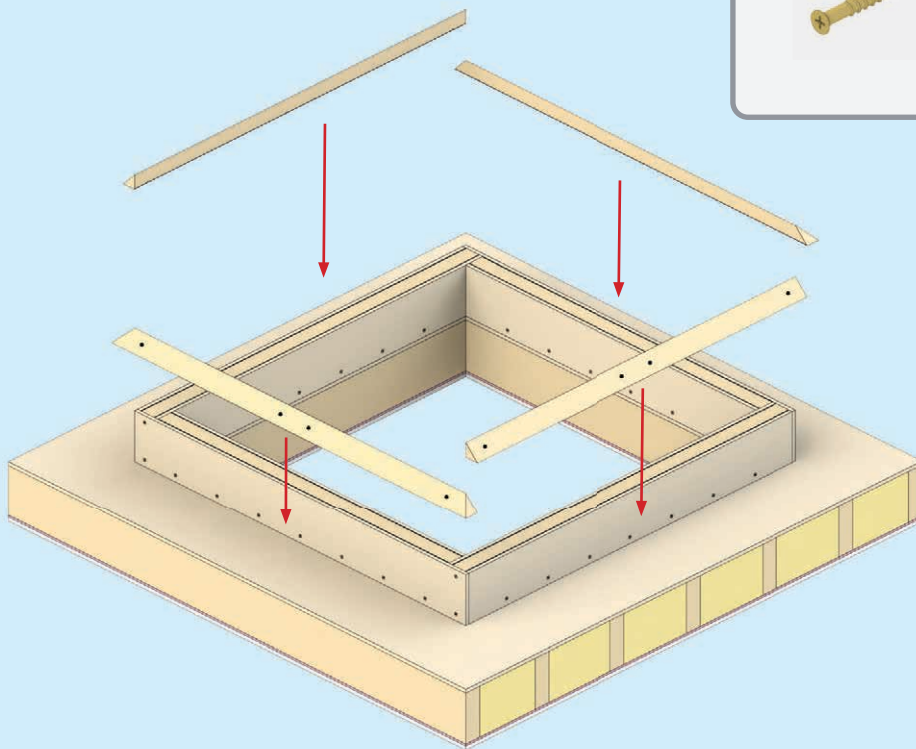


3.5mm x 45mm Screw
(provided)

USE ON FIXING POINTS
MARKED IN BLACK

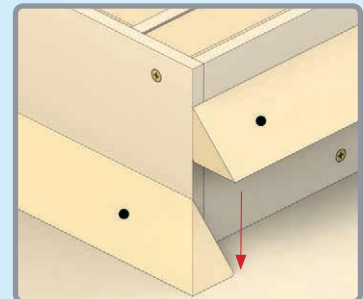

Ensure faces sit flush

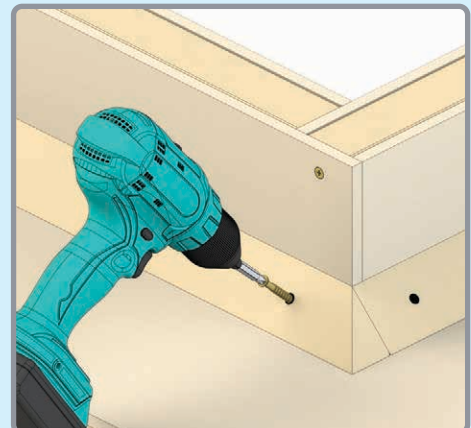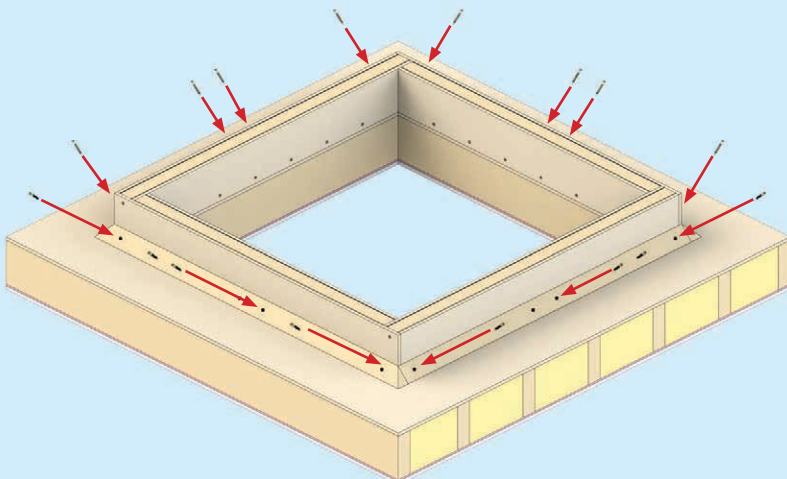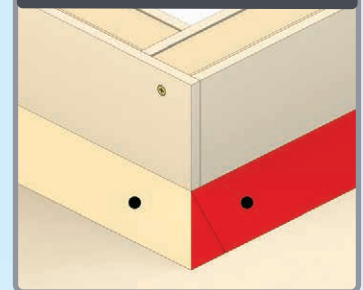



www.korniche.co.uk